


Installation Instructions

DREX0015 HS-PC

HeatShrink Power Connection / End Seal

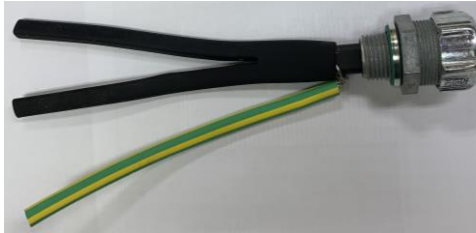

APPROVALS*



231572

Class I, Div. 2, Groups A, B, C, D
Class II, Div. 2, Groups F, G
Class III



Trace Heating System For HazLoc
E471335
**E484945

Listed for use with Drexan PipeGuard Warm (PGW), MultiTrace (MT) Cables.

*This kit is not UL Listed for use with HotTape products.

** General Purpose/Ordinary Location UL File

These installation instructions are only for use with the following Drexan HeatTracer Self-Regulating heater products:

PipeGuard® Warm (PGW), MultiTrace® (MT) and HotTape® (HT), OmniTrace Warm

CAUTION: A ground fault protection device must be used with this heating device.

ATTENTION: Ce produit doit être utilisé avec une protection de mise à la terre



WARNING: This is an electrical device and in order to ensure proper operation and prevent shock or fire it must be installed correctly. Read these important warnings. Follow all installation instructions.

The person(s) responsible for installation shall verify that the installation and inspection are performed by personnel who are trained, qualified, and knowledgeable in trace heating systems when using the Division method of area classification. The installation and inspection shall be in accordance with the system manufacturer's design documents, product recommendations, and installation instructions

CAUTION: Ground-fault equipment protection shall be provided to de-energize all normally ungrounded conductors of electrical heating cable sets, with ground fault settings sufficient to allow normal operation of the heater unless applicable codes permit otherwise, and to minimize the danger of fire from sustained electrical arcing if the heating cable is damaged or improperly installed and to comply with Drexan requirements, agency certifications and National Electrical codes. Conventional circuit breakers may not stop arcing. Each heating device branch circuit or each heating device shall have ground fault equipment protection.

The heating cable core is conductive and can short if not properly insulated and kept dry. Component and heating cable ends must be kept dry before and during installation. Fire-resistant thermal insulation materials should be used. Heating cable core bus wires can overheat and short when damaged. When cutting the cable jacket or core do not break bus wire strands. Bond the metallic braid of the self-regulating heating cable to a suitable grounding (earth) terminal. De-energize before installation or servicing.

Where equipment may be installed in locations where it may be subject to damage, or exposed to excessive external stresses (e.g. vibration, heat, impact) or aggressive substances, it must be protected by additional means. Any repairs or parts replacement must be done by Drexan or appointed agents. Substitution of parts, or utilization in a manner not specified by Drexan may impair equipment protection and void warranty, approvals and performance claims. Do not use substitute parts or the use of electrical tape. Component approvals and performance characteristics are based on Drexan specific parts only.

Drexan Energy Systems Inc.
Kelowna, BC, Canada, V4V 1S5

KIT CONTENTS

- Strain Relief (cap, washer, grommet, base)
- (3) Wire Nuts
- Core Sealer
- (2) Warning Labels
- Installation Instructions
- Lock Nut and Sealing Ring
- Green/yellow heat shrink tube 6" (15 cm)
- End Seal Kit (DREX0017 (HS-ESK))

REQUIRED BUT NOT PROVIDED

Materials


- Certified Junction Box for suitable location

Equipment


- Utility Knife
- Wire Stripper
- Wire Cutter
- Crimp Tool
- Multi-head Screwdriver
- Needle Nose Pliers
- Heat Gun
- Pipe Wrench

ASSEMBLY INSTRUCTION DETAILS – POWER CONNECTION



1. Slide parts onto cable as shown.

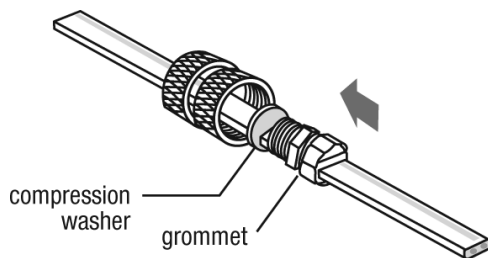


2. Lightly score around and down the outer jacket. Bend heating cable to break jacket at score and peel off outer jacket.

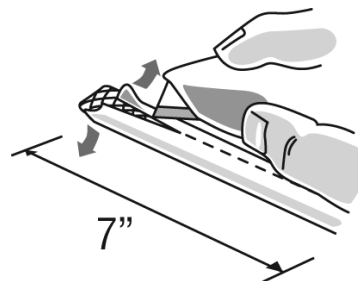

3. Push back Braid to loosen. Spread apart Braid as shown and bend the heating cable and work it through the opening in the Braid.

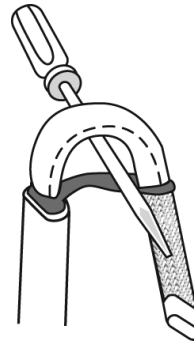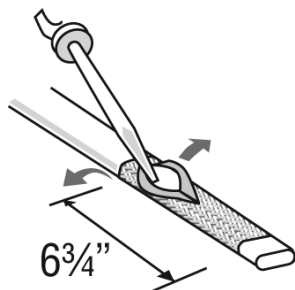

4. Position Braid on one side of the heating cable and twist into a pigtail. Lightly score around and down the inner jacket 1/2" from outer jacket and remove

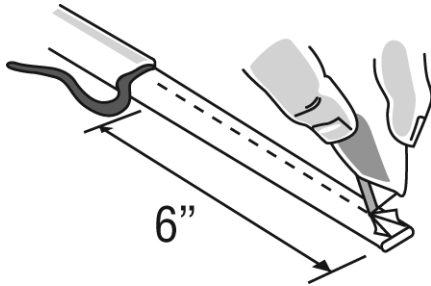

5. Cut down the middle of the heater core between the bus wires. This can be done with a scissors, knife or other tool. The core sealer will fit over the bus wires while still encapsulated by the heater core. It is not necessary to expose the bare bus wires.




6. Install the core sealer over the encapsulated bus wires and install the yellow/green heat shrink over the ground braid.



7.



Install the strain relief in a Listed junction box. Ensure the sealing ring is compressed between strain relief body and junction box surface. Make connections using wire nuts provided and ensure the strain relief and lock nut are grounded. When installing into a non-metallic junction box, a UL-Listed bonding locknut shall be used and an additional conductor shall be provided to bond the locknut, cable braid and branch circuit ground conductor.

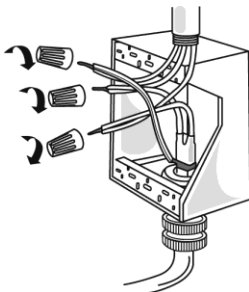



For installation in hazardous locations the junction box and (if used) the termination fittings provided for field wiring shall comply with the requirements for boxes and fittings of the National Electrical Code or Canadian Electrical Code (as applicable) for the hazardous classification of the installation. Wiring methods shall comply with one of the wiring methods permitted in the NEC or CEC (as applicable) for the hazardous location classification of the installation.

ASSEMBLY INSTRUCTION DETAILS – END SEAL (DREX0017)

1. Strip outer jacket $\frac{3}{4}$ " (19 mm) as shown. **Do not cut into inner jacket.**
2. Unravel Ground Braid and trim outer jacket cut back.

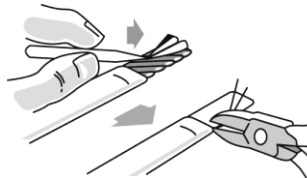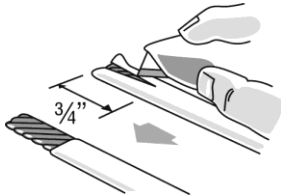

3. Heat shrink tubing in place with $\frac{3}{8}$ " (10 mm) over end of heating cable. Remove heat and squeeze with needle- nose pliers. **Hold for 15 seconds.**

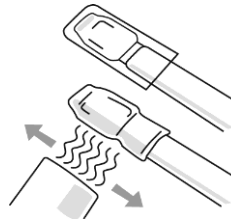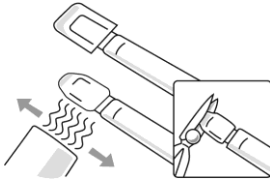

4. Heat shrink cap in place over smaller heat shrink tube until inner sealant starts to appear out from the boot edge.