

Installation Instructions

DREX0074-PWR CMH-PWR lot#210324 CMH - Power Connect



These installation instructions are only for use with the following Drexan HeatTracer Constant Wattage heater products: PipeGuard® CMH

This kit may be installed in temperatures as low as -40°F/-40°C.



WARNING: This is an electrical device and in order to ensure proper operation and prevent shock or fire it must be installed correctly. Read these important warnings. Follow all installation instructions.

The person(s) responsible for installation shall verify that the installation and inspection are performed by personnel who are trained, qualified, and knowledgeable in trace heating systems when using the Division method of area classification. The installation and inspection shall be in accordance with the system manufacturer's design documents, product recommendations, and installation instructions

CAUTION: Ground-fault equipment protection must be used to minimize the danger of fire from sustained electrical arcing if the heating cable is damaged or improperly installed and to comply with Drexan requirements, agency certifications and national electrical codes. Conventional circuit breakers may not stop arcing. The metal sheath of CMH heating cable shall be grounded, but shall not be used as the grounding means.

CAUTION: A ground fault protection device must be used with this heating device.

ATTENTION: Ce produit doit être utilisé avec une protection de mise à la terre.

Each heating device branch circuit or each heating device shall have ground fault equipment protection.

Metallic structures or materials such as metal pipes used to support CMH cable shall be grounded.

CMH Cable:

- is not to cross or come in contact with itself.
- is to be thermostatically controlled.
- may be terminated or spliced in any certified enclosure mounted off the heated surface.

Component approvals and performance characteristics are based on Drexan specific parts only. Substitution will void approvals and performance claims.

Component and heating cable ends must be kept dry before and during installation. Fire resistant thermal insulation should be used. De-energize before installation or servicing.

APPROVALS



231572



E471335

Class I, Div. 1/2, Groups A, B, C, D

Class II, Div. 1/2, Groups E, F, G

Class III

120 – 277 Volt. 30 W/ft. max., Maximum withstand temperature 450°C power off.

Drexan Energy Systems, Inc.
Kelowna, BC, Canada, V4V 1S5

KIT CONTENTS

- (1) Strain Relief Fitting (with grommet and washer)
- (1) Silicone Boot
- (1) 3/4" Sealing Ring (use with HP-BRAK, bottom entry)
- (1) #2 Anti-short Bushing (optional accessory)
- (1) Heat Shrink Sleeve
- Installation Instructions
- Silicone RTV Sealant

REQUIRED BUT NOT PROVIDED

Materials

- Pipe straps
- Thermostat
- Junction Box

Equipment

- HP-BRAK bracket
- Fine tooth hacksaw
- Pipe wrench
- CMH Stripping Tool
- Electrical Tape

I. ASSEMBLY INSTRUCTION DETAILS

Note: CMH cable may be terminated in any enclosure certified for the application.

When using a non-metallic enclosure use a hub with a grounding lug.

1. Megger the insulation resistance between the sheath and conductors. The reading should be 20 MOhm or higher prior to installing the cable. After thermal insulation is installed on the pipe ensure the megger reading is 5 MOhm or higher.

Note: CMH Cable is a zone type cable. Refer to CMH Cable Reference Chart at the back of these instructions.


2. Using a hacksaw, cut the desired length of CMH cable allowing an extra three (3) feet (1 m) per end and appropriate cable length for heat sinks such as valves, flanges and pipe supports.
3. Using a CMH Stripping Tool, strip the sheath back 12" (30.4 cm) from the raw end, remove and discard. This exposes the core to locate the zone node.

Note: If the cable has two-foot zones you may have to strip back up to 24" (60.8 cm). Refer to chart on page 4. Zones nodes can be identified by the indent in the core. Strip back the insulation to expose and confirm the location of the node.

Note: If using a hacksaw cut around the sheath being careful not to damage the core.



4. From the node measure 14" (35.5 cm), mark the sheath and strip the sheath to the mark. Discard the sheath. Wrap a layer of electrical tape around the core, next to the sheath, to prevent the insulation from unwrapping into the sheath.

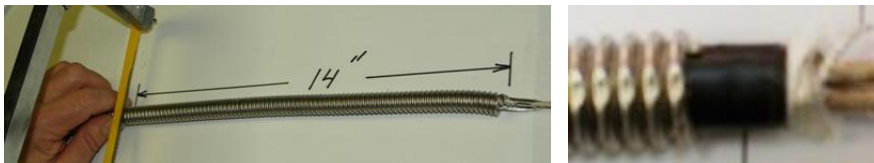

5. Cut and remove the wrapped insulation, down to the tape and close to the end of the sheath, taking care not to damage the insulation on the bus wires. Discard the outer insulating layers and cut the heater element close to the tape.

Note: It is critical to ensure the heater element is cut cleanly and no strands can make contact with the sheath when installing the boot.



6. Place the supplied heat shrink over any exposed bus wire that might be present such as where the node was located. **Ensure the heater element is trimmed back close to the tape isolating the heater element from the sheath** or bus wire. This kills the next 10" (25.4 cm) zone of heating cable under the sheath and serves as a 10" (25.4 cm) cold lead.



7. Slide the cable connector, washer and grommet onto the cable sheath.



8. Position the boot over the bus wires close to the sheath. Apply silicone sealant inside the boot and around the cable sheath, 1/2" (13 mm) from the end of the sheath.

Important: after installing the boot megger the cable between the sheath and conductors to ensure the heater element is isolated from the sheath. The insulation resistance reading should be 5 MOhm or higher.



9. Thread the cable connector (strain relief) into the junction box and tighten. Tighten the middle nut to engage the strain relief onto the cable sheath. Position the washer inside and grommet inside the chamber. Tighten down the nut compressing the grommet ensuring an environmental seal.

Note: If the washer is not positioned properly the grommet might be difficult to compress inside the chamber. Ensure all threads bottom out after tightening.



10. Make the electrical connection as required.

II. CMH CABLE REFERENCE CHART

| CABLE REFERENCE | COLOUR CODING (Target resistance per zone (ohm)) | ZONE LENGTH |
|-----------------|--------------------------------------------------------|----------------|
| 5CMH208 | BLACK (4326) | 2 FT |
| 10CMH240 | WHITE (2880) | |
| 10CMH277 | BLUE (3836) | |
| 15CMH277 | ORANGE (2558) | |

| | | |
|----------|-------------------|------|
| 5CMH120 | NO COLOUR (2880) | 1 FT |
| 15CMH208 | | |
| 20CMH240 | | |
| 5CMH277 | LIME GREEN (7673) | |
| 10CMH120 | YELLOW (1440) | |
| 30CMH208 | | |
| 10CMH208 | DARK GREEN (4326) | |
| 15CMH120 | BROWN (960) | |
| 10CMH208 | RED (3836) | |
| 15CMH240 | | |
| 20CMH277 | | |
| 20CMH120 | GREY (720) | |
| 20CMH208 | FLUOR PINK (2163) | |
| 30CMH120 | LIGHT BLUE (480) | |
| 30CMH240 | PURPLE (1920) | |

III. PREVENTIVE MAINTENANCE

Prior to startup and on a regular annual basis it is recommended that both visual and electrical inspections be performed. The following is a list of heating cable system checks.

- Thermal Insulation: Check the waterproofing for damage as well as cracks or gaps in caulking on the thermal insulation to ensure no damage exists resulting in poor insulation values.
- Inspect all electrical enclosures for moisture, corrosion or foreign matter.
- Check all electrical connections for tightness and perform an insulation resistance check with a megger, from heating cable conductor to sheath (ground). The minimum resistance should be 5 MOhm or higher.

HEATING CABLE TESTING REPORT

| | | | | | | |
|----------------------------------------|--|-------|--|--------------|------|-------------|
| Customer | | | | Contractor | | |
| Site Location | | | | Project Ref. | | |
| READINGS PRIOR TO INSTALLATION: | | | | | | |
| Insulation Resistance (MOhm) | | | | Panel No. | | Breaker No. |
| Ambient Temp. | | Volts | | Amps | | |
| Tested By | | | | | Date | |
| READINGS AFTER INSTALLATION: | | | | | | |
| Insulation Resistance (MOhm) | | | | Panel No. | | Breaker No. |
| Ambient Temp. | | Volts | | Amps | | |
| Tested By | | | | | Date | |
| FINAL READINGS: | | | | | | |
| Insulation Resistance (MOhm) | | | | Panel No. | | Breaker No. |
| Ambient Temp. | | Volts | | Amps | | |
| Tested By | | | | | Date | |